



FIT



COMFORT



DURABLE

CASITA 8500



CHARACTERISTICS

- This visor holder is made out of HDPE
- Provided with an inside with rotating knob, making it easy to adjust it to the required size
- Adjustable inside: 53 to 66 cm
- Exchangeable, absorbing sweatband
- When combined with the OXXA Colo 8550 visor (available separately), it is suitable for myriad applications
- The OXXA Colo 8550 visor can easily be attached using the four locking ratchets on the sides
- Weight: 232 grams

Article number: 7.78.500.00

SUITABLE FOR ACTIVITIES IN E.G.

- Construction
- Shipbuilding
- Laboratories
- Metal industry
- Petrochemistry
- Transport & logistics

COLOUR

Black

SIZES

One size

PACKAGING

- 1 item in PE bag
- 10 items in outer box





EN 166:2001
EN 170:2002

(combined with OXXA Colo 8550 visor)

PRODUCT INFORMATION

SIZE	ARTICLE NO.	EAN CODE 1 UNIT (PE BAG)	EAN CODE 10 UNITS (OUTER BOX)
One size	7.78.500.00	8718249044236	8718249044243

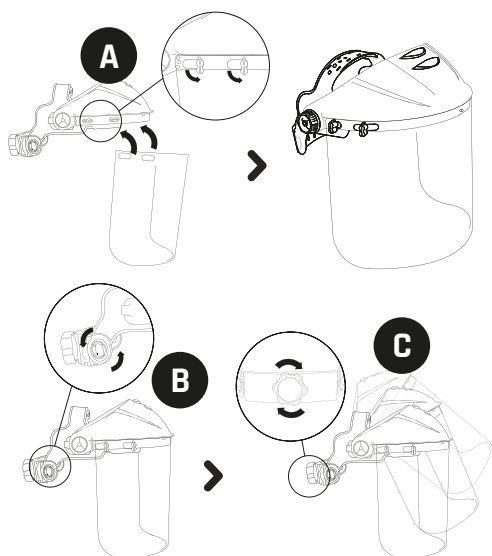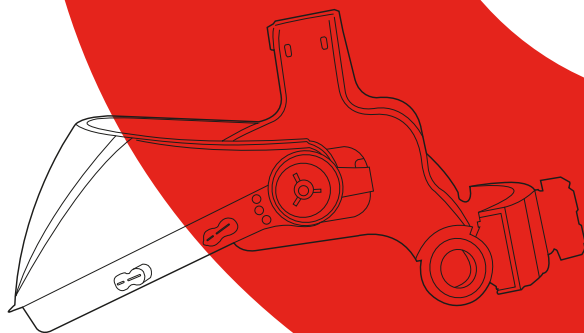

WEARING INSTRUCTIONS

The visor holder must always be used alongside the visor in order to provide adequate protection.

- The visor must be placed into the visor holder. Place the visor with the hole in its centre over the pin in the middle of the visor holder. Next, slide the visor underneath the two supports on both sides of the pin in the centre. There are two locking pins on both sides of the visor holder. Slide the visor over these two locking pins on one side and turn the pins to lock the visor in place. Do the same on the other side of the visor. The product is now ready for use. (figure **A**)
- Using the two wheels on the left and right side of the holder, you can loosen or tighten the fit (figure **B**).
- The interior with knob can be adjusted by turning the knob into the desired position. You can use the knob to loosen or tighten the holder (figure **C**)



STORAGE, MAINTENANCE AND CLEANING

Keep the product in its original packaging. Store the product at room temperature in a dry, clean and well-ventilated area. Keep the product out of direct sunlight and away from chemical and abrasive substances. To clean the product, always rinse with water at room temperature (20°C ± 5°C) and use a mild cleaning agent. If necessary, you can add a small amount of disinfectant to the water. Avoid using hot water or solvents. The visor must be cleaned with mild soap and water. Always dry the product with a soft cloth. Never use an abrasive cloth or dry the product on or near a heat source. Cleaning the product without water or with a rough cloth will result in scratches on the visor.

TESTING INSTITUTE

This visor holder has been certified by: BSI Group The Netherlands B.V. (Notify Body No. 2797), John M. Keynesplein 9, 1066 EP Amsterdam, The Netherlands.

DECLARATION OF CONFORMITY

For a copy of the declaration of conformity, we would like to refer you to the following web link:

www.oxxa-safety.com/doc

RELATED PRODUCTS



COLO 8550

Art. no. 7.78.550.00



COLIMA 8510

Art. no. 7.78.510.00

YOUR SUPPLIER: